

## Configuration for Honeywell 3800 Bar Code Reader

### Factory Defaults

Resets your scanner to default settings.



Programs the scanner to work as a USB  
Keyboard Device



### Carriage Return Suffix

Programs the scanner to add an Enter key function after each scan.



### Presentation Mode

Hands free, LED's are off until a bar code is presented.



*Note: for the 3800 and 3900 Only*



Voting High